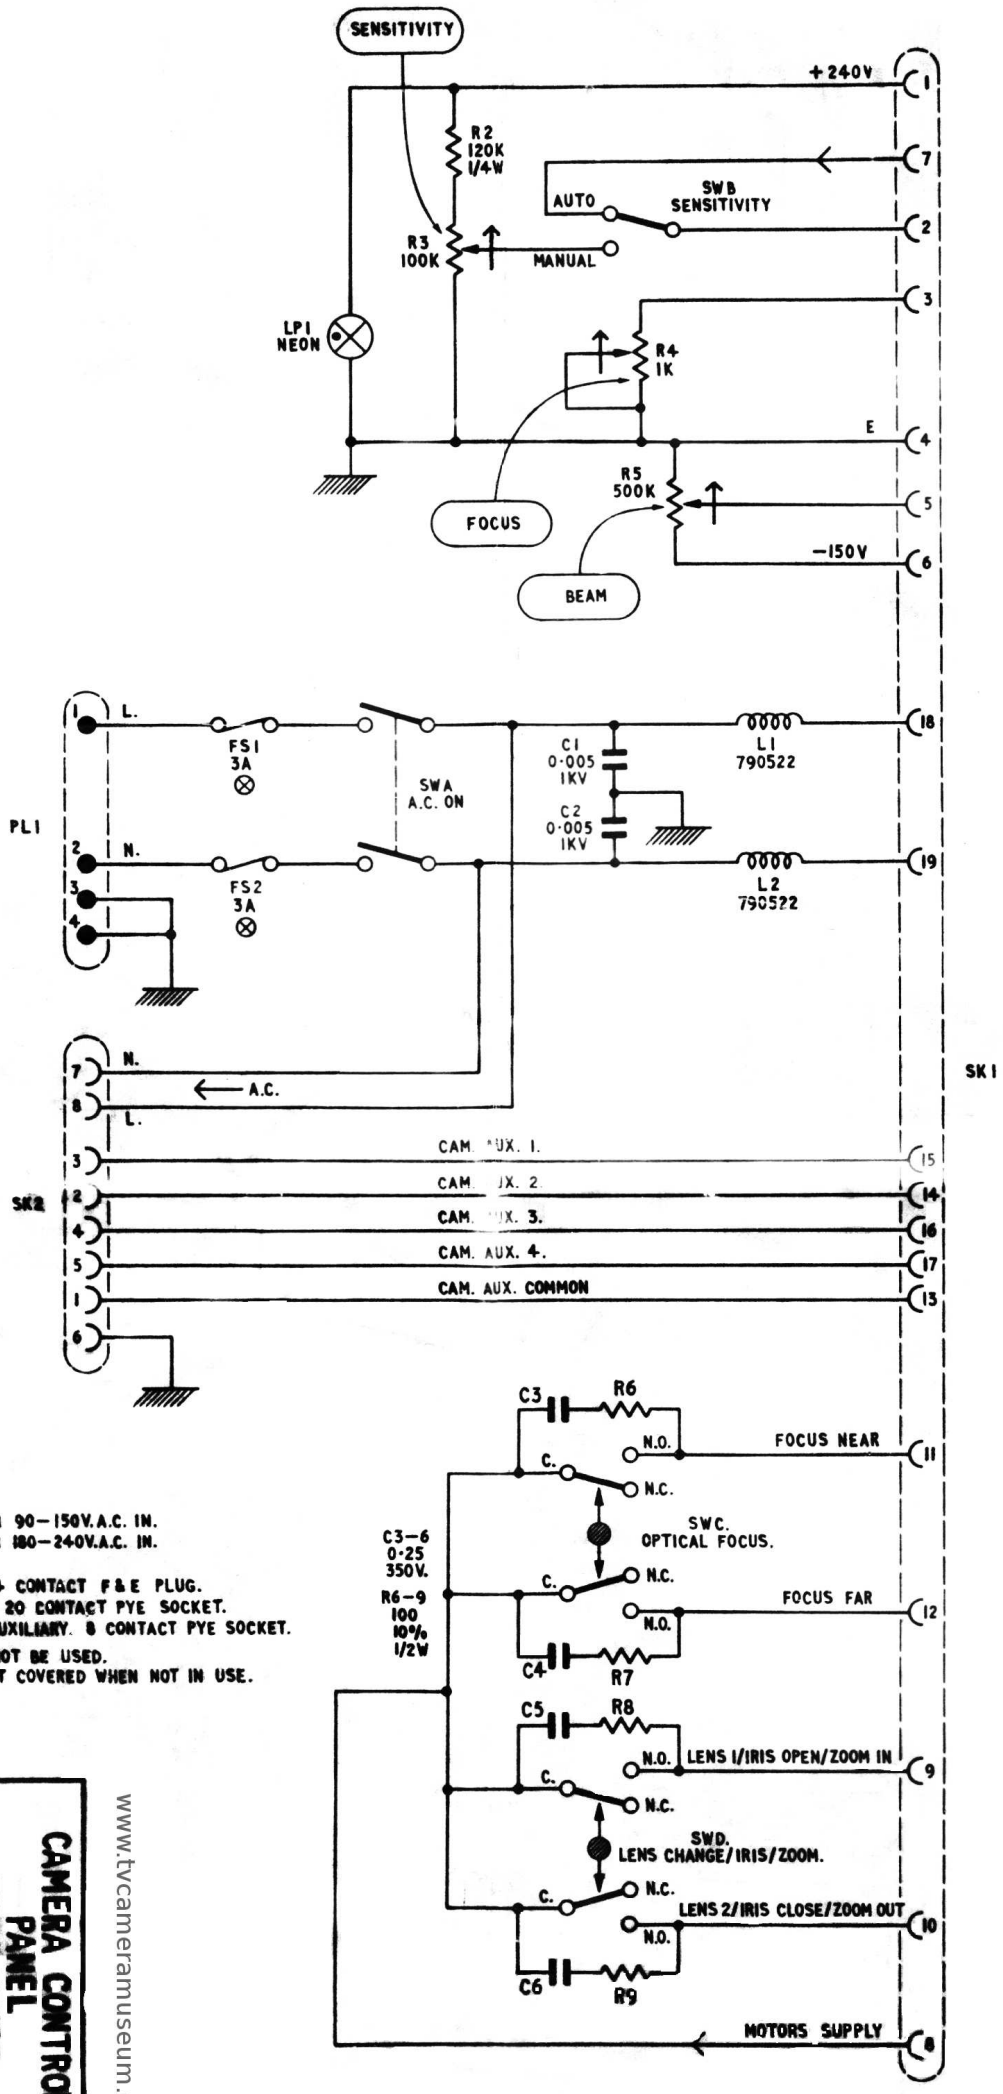


NOTE.

⊗ FS1 & 2: 5A FOR 90–150V. A.C. IN.
3A FOR 180–240V. A.C. IN.

PL1. A.C. IN. 4 CONTACT F & E PLUG.
SK1. TO C.C.U. 20 CONTACT PYE SOCKET.
SK2. CAMERA AUXILIARY. 8 CONTACT PYE SOCKET.
SK1/20 MUST NOT BE USED.
SK2 TO BE KEPT COVERED WHEN NOT IN USE.

	MR. N.	CAMERA CONTROL PANEL TYPE 3716C
	ISSUE 3	
	DR'N. JEG	DR'G No. C8437/16C
	CHK'D.	
	APP'D.	

PYE T.V.T. LTD.

www.tvcameramuseum.org