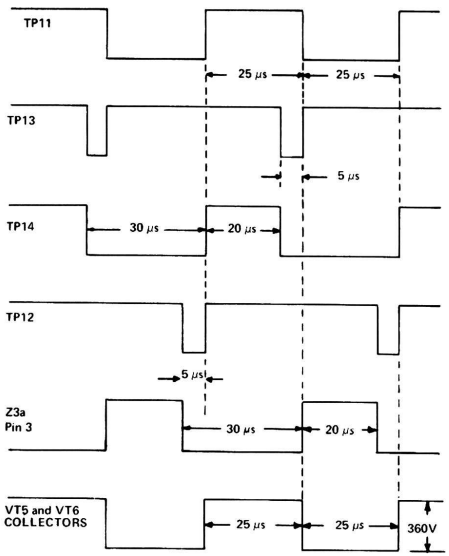
**TEST EQUIPMENT** Oscilloscope (Marconi Instruments TF2210 or similar)
Avometer 8 or 9.

**CHECKING PROCEDURE**

(1) Set the voltages on each board as shown above the legends. Check voltages as on the circuit diagrams.

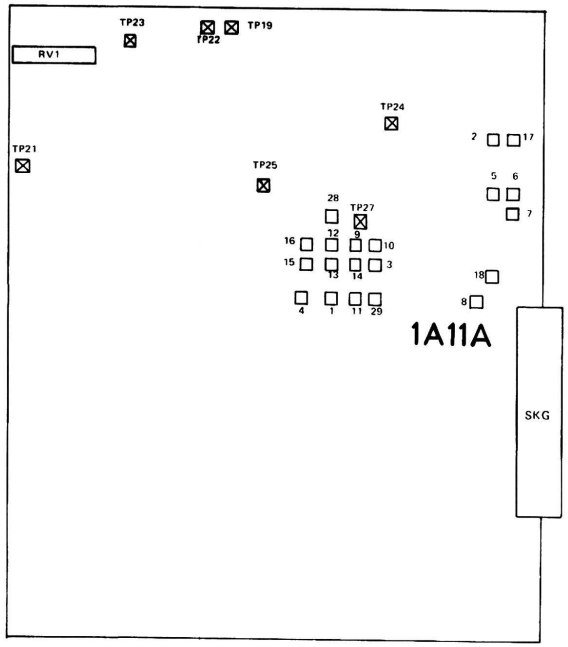
(2) Check the waveforms below on board 1A11D. All waveforms are at logic level unless otherwise specified.



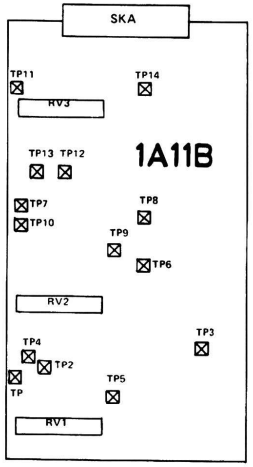

**WARNING**

HIGH VOLTAGES ARE PRESENT ON THIS UNIT. TAKE CARE WHEN CARRYING OUT CHECKS.

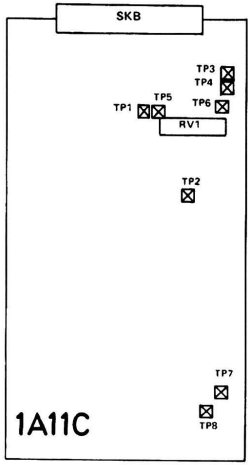
Set RV1 for +30V at TP19.

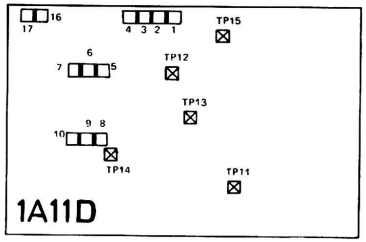


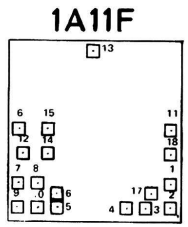

Set RV1 for +15V at TP1
Set RV2 for -15V at TP10
Set RV3 for +5V at TP11




Set RV1 for +9.5V at TP6




www.tvcameramuseum.org